

# Zero-Screw Furniture Anti-Tip Kit

## Reasonably Easy 2-Step Installation Guide



We know that instructions are boring, especially for you dads that like to try and figure things out on your own, but please check them out and just maybe you will find something useful (dad's helped write these!). Especially considering the fact that you bought this product, which by the way we greatly appreciate, is to keep your children safe. What else can be more important?

**Important tip:** If you will use the adhesive installation method, before removing the adhesive protective liner, do a dry run to make sure the installation will work. The SecureHold adhesive is only meant to be used once and cannot be repositioned if done incorrectly! You must use Rubbing Alcohol to properly clean the surface before attaching it. The adhesive will achieve full strength after 24 hours.

We know that videos can be a great help when installing new products, so here is a QR code to help you find just that. Simply scan with the camera on your cell phone and it will show a link that will take you to these videos.



### FAQ

Here are some quick questions that might pop up as you get ready to install this unique product.

#### Is it enough to use just one strap?

The straight forward answer is no! We work closely with the professional childproofing community and they are totally clear on this, you need one on each end of the furniture you are anchoring.


#### How strong are these hooks?

If installed correctly in the drywall, the SafeHooks hold a person weighing 200 lbs. as can be seen in our video!

#### How strong is the adhesive?

In a simulation test, the adhesive held a 200 lb. weight hanging from the top drawer of a dresser when pulled all the way out as can be seen on our website [www.qdosafety.com](http://www.qdosafety.com).

### Parts List

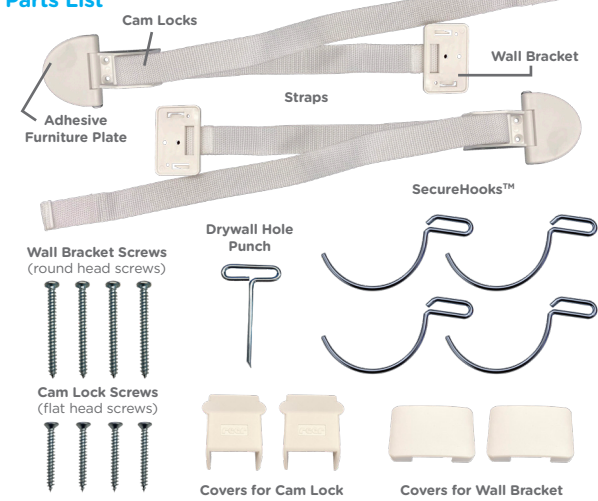

### Step 1 - Positioning and attaching the Wall Brackets

There are two options for how to attach the Wall Brackets.

**Option A** - The Zero-Screw and no tools needed option into a hollow drywall using the SecureHooks™

**Option B** - With screws into the studs behind the drywall (for plaster walls use this option). You will need a Phillips screwdriver and a power drill. For installation into any other wall material, use only the appropriate hardware for that material. Consult a handyman, hardware store, or professional baby proofer for advice.

#### Option A - How to use the SecureHooks™ into a hollow drywall



a. Leaving the furniture in place, use a stud finder to locate and carefully mark the center of the studs with a pencil at the top of the furniture. Standard studs are 1 1/2" (4 cm) wide and normally 16" (40 cm) apart on center.



b. Identify the space in between the studs toward the edge of the furniture and mark a location on the wall that is a minimum of 3" (8 cm) from the center of the stud and is at least 3" in from the edge of the furniture. Repeat on the opposite side of the furniture.



c. Pull the furniture out from the wall and measure 18" (45 cm) straight down from those marked locations. This will be the locations for attaching the Wall Brackets.



d. Next, peel the protective liner from the "positioning adhesive" on the back of the Wall Brackets.



e. With the strap pointing upwards, center the brackets on your two marks in these locations. The "positioning adhesive" will help hold the Wall Brackets in place while you install the SecureHooks.



f. Using the Drywall Hole Punch, insert it in the upper right hole at approximately 20 degrees angle downward, leaning against the curved support, then twist from side to side until the tool completely penetrates the drywall.



g. Using one of the SecureHooks, insert in the hole and feed all the way through until the handle can be turned and locked in under the Catch.



h. Follow the same procedure for the lower left hole, using the Hole Punch to puncture a hole in the opposite direction and then secure with the SecureHook. Repeat for the second Wall Bracket.



i. Once both Wall Brackets are attached to the wall, attach the Covers to both Brackets for a nice finished look.

**IMPORTANT:** The "positioning adhesive" is only to help hold the Wall Bracket during installation. The Wall Bracket MUST be attached with the SecureHooks™ or screws for safety!

#### Option B - How to use the Wall Bracket Screws into Studs Behind Drywall



a. Leaving the furniture in place, use a stud finder to locate and carefully mark the center of the studs with a pencil at the top of the furniture.



b. Identify the studs toward the edge of the furniture that lines up at least 3" (8 cm) inside the edge of the furniture. Repeat on the opposite side of the furniture. It might be necessary to shift the furniture slightly to achieve this.



c. Pull the furniture out from the wall and measure 18" (45 cm) down from those marked stud locations. This will be the locations for attaching the Wall Brackets.



d. Next peel the protective liner from the "positioning adhesive" on the back of the Wall Bracket.



e. With the strap pointing upwards, center the brackets on your two marks. The "positioning adhesive" will help hold the Wall Brackets in place while you install the Wall Bracket Screws.



f. Insert the included Wall Bracket Screws into the two holes on top of each other in the center of the Wall Bracket, preferably using a power drill with a screwdriver bit.



g. If it becomes difficult to drive the screws all the way in, back them out and drill pilot holes using a 3/32" (2 mm) drill bit, before driving the screws all the way in.



h. Screw in the screws to secure the Wall Brackets.



i. Once both Wall Brackets are attached to the wall, attach the Covers to both for a nice finished look.

**IMPORTANT:** The "positioning adhesive" is only a help to hold the Wall Bracket during installation. The Wall Bracket MUST be attached with the SecureHooks™ or screws for safety!

### Step 2 - Attaching the straps to the Furniture

There are two options for how to attach the Furniture Anti-Tip Kit to the furniture.

- Option A** - With the Adhesive Furniture Plate on top of the furniture.
- Option B** - By screwing the Cam Lock into the back of your furniture.

#### Option A- How to attach the Adhesive Furniture Plate



a. Before attaching the adhesive, it's **very important** that the surface has been cleaned with **Rubbing Alcohol** to make the adhesive stick properly. Make sure the area is 100% clean and dry before proceeding.




b. Extend both straps to the full length by releasing the Cam Locks. Lift up the straps and push the furniture back towards the wall and leave about a 6" gap.



c. Remove the protective Liner on the Adhesive Furniture Plate.



d. While holding the Cam Lock firmly up against the back of the furniture, straight up from the Wall Bracket, fold the Furniture Plate down until it sticks. Press on it hard for at least 30 seconds for strong adhesion. Do the same for the second strap on the other side.

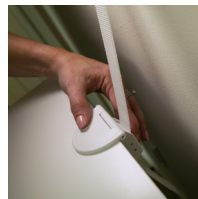

e. While holding the Adhesive Furniture Plate in place, push on the Cam Lock release lever, and pull upwards on the strap and take most of the slack out, but **DO NOT TIGHTEN** all the way.



f. Fold the strap down and put the Cover on the Cam Lock.



g. Do the same for the second strap and Cover on the other side.



h. Push the furniture back to the wall and you are done!

**IMPORTANT:** There MUST be a little slack in the strap to avoid it from constantly putting stress on the adhesive! Even with this little slack, the furniture will only move, at the most, less than 1" before the strap stops it from moving further, so nothing to worry about.

#### Option B - How to attach the Cam Lock with Screws



a. Using a Phillips screwdriver, unscrew the hinge pin and remove the Adhesive Furniture Plate from both Cam Locks.



b. Extend both straps to the full length by releasing the Cam Locks. Lift up the straps and push the furniture back towards the wall and leave about a 6" (15 cm) gap.



c. While holding the Cam Lock up against the back of the furniture, directly above the Wall Bracket, position the Cam Lock so the two screw holes line up with the center of the furniture top, and mark with a pencil. Do the same for the second Cam Lock.



d. Pull the furniture back out and while being careful not to damage the top of your furniture, drill two pilot holes using a 3/32" (2 mm) drill bit for all 4 screw locations.



e. Push the furniture back until the Cam Locks reach the back of the furniture. Attach both Cam Locks with the included Cam Lock Screws.



f. Push the furniture back to about 3" (8 cm) from the wall, press on the Cam Lock and pull upwards on the straps to take the slack out, but without tightening it all the way.



g. Fold the strap down and put the Cover on the Cam Lock.



h. Push the furniture all the way back towards the wall and you are done!

#### Temporary Maneuver for Cleaning



a. In order to move the furniture out for cleaning, pull the furniture out slightly so you can remove the Covers over the Cam Locks. While pushing on the release lever on the Cam Locks, extend the straps to full length.



b. You can now pull the furniture out for cleaning (**no excuse now for not cleaning back there!**)



c. Push the furniture back towards the wall and leave a 6" (15 cm) gap. Pull the straps upwards to take the slack out, but **DO NOT TIGHTEN** completely.


#### Permanent Removal



a. In order to permanently remove the Furniture Anti-Tip Kit, pull out the furniture slightly so you can remove the Covers over the Cam Locks. While pushing the release levers on the Cam Locks, extend the straps to full length.




b. You can now pull the furniture out.

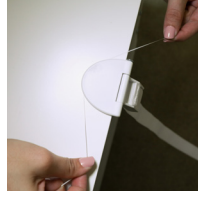


c. Removing the Adhesive Furniture Plate. Use a string of dental floss and "saw" your way through the foam in the adhesive.



d. To remove the adhesive, simply rub it off with your fingers.

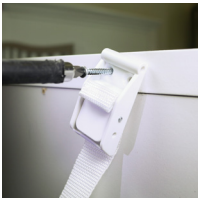


e. Removing the Cam Lock when attached with screws, simply unscrew the screws.

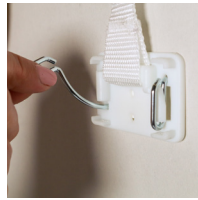

f. Removing the wall bracket. If installed with SecureHooks, twist the handle out from under the catch and pull out from the wall.



g. If installed with screws, simply unscrew the screws.

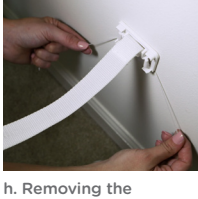

h. Removing the adhesive on the Wall Bracket. Use a string of dental floss and "saw" your way through the foam in the adhesive. To remove remaining adhesive, simply rub it off with your fingers.

**IMPORTANT:** If any adhesive residue still remains, use a cleaner that will not damage the surface you are removing the residue from.

