



# Adhesive Fridge/Freezer Lock

## Easy 3-Step Installation Guide


Before removing the adhesive protective liner, do a dry run and test each step to make sure the installation will work. The SecureHold adhesive is meant to be used once only and cannot be repositioned if done incorrectly.

### Important:


Qdos wants to keep you and your children safe and for that we need you to do your part by carefully reading and following the instructions below.

For installation videos and FAQ go to: [QdosSafety.com](http://QdosSafety.com)

### Parts List:

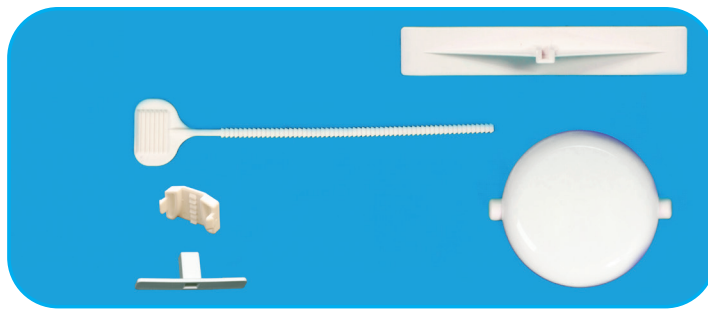

## Step 1 - How to position Mounting Plate

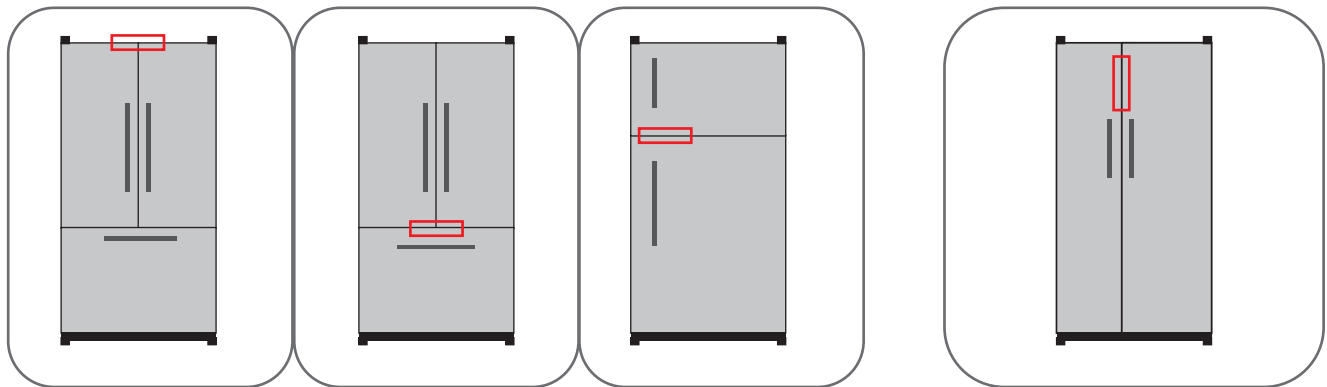

A

B

C

D

**HORIZONTAL**  
Mounting Plate

**VERTICAL**  
Mounting Plate


- A - On top of the fridge frame.
- B - On the frame at the bottom of the fridge above freezer drawer.
- C - On frame between freezer and fridge.

- D - On frame between fridge and freezer doors.

## Step 2 - Cut Arm and Position on Mounting Plate



- Slide the Arm against door until “head” touches fridge/freezer frame.
- Slide Cutting Guide onto Arm, flat side first until it hits the door.
- Mark at narrow end of the Cutting Guide, see dotted line, and cut arm to length with a pair of sturdy scissors.

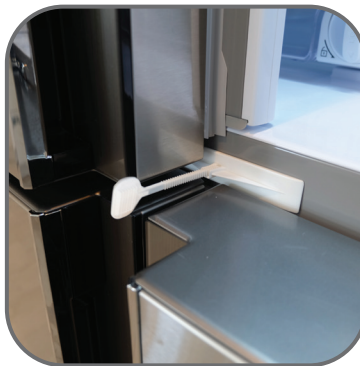

- For HORIZONTAL position in A, B, or C above:
- Hold Mounting Plate horizontally and insert Arm into the “cradle” with “head” of Arm at 90°.



- For VERTICAL position in D above:
- Hold Mounting Plate vertically and insert Arm into the “cradle” with “head” of Arm parallel to Mounting Plate.

## Step 3 - Positioning Mounting Plate and Secure Arm



Thoroughly clean the surface the adhesive will be attached to with rubbing alcohol. Wait to make sure the surface is dry.

Remove the adhesive protective liner.

With the Arm inserted and sliding along door or drawer, guide Mounting Plate into desired position. Press on Mounting Plate for 30 seconds.



### **IMPORTANT!**

Let adhesive set for 24 hours to achieve full strength before attaching cap.

Finally lock the Arm in place with the Arm Lock. The Arm Lock can easily be removed by pressing the tabs on the back.

## Storage Post for Cap




For convenience we have included an adhesive Storage Post for when the Cap is removed.

To attach the Storage Post, remove adhesive protective liner then press firmly into place for 30 seconds.

We suggest positioning the Storage Post at eye level to also function as a reminder when the fridge/freezer is locked.

## To Permanently Remove Storage Post or Mounting Plate

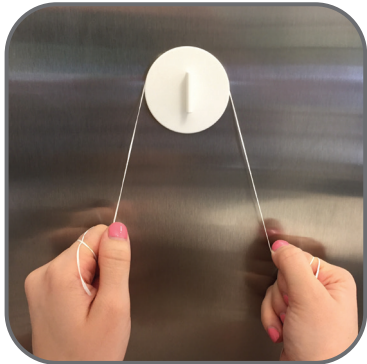

Use a string of dental floss and “saw” through the foam tape.

For remaining tape residue, use a finger to simply rub it away. For any remaining residue, use a cleaner that will not damage the surface you are removing the residue from. There is no way to test all possible surfaces SecureHold Adhesive will be applied to; please use caution when removing to avoid damaging the surface. SecureHold adhesive may cause damage to some surfaces.